 


# TIMBER VAULTS

Concealment Furniture


## Included Parts:

1. Wood screws  
(Qty. varies by mirror size).
2. Mirror
3. One RFID card
4. One RFID programing card
5. One RFID Coin
6. One RFID Key Fob
7. Lock pin and bolts
8. Two Magnets

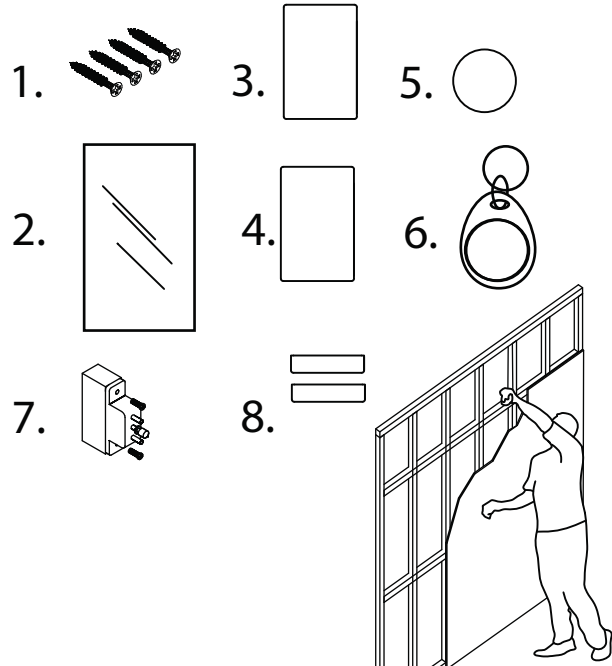

## Installation Instructions:

1. Locate wall studs.
2. Cut the drywall between studs to the dimension of the cabinet (back section) that will be inserted into your wall (Add 1/4" to that dimension).  
**⚠ Caution:** Make sure you have checked the area for utilities, etc.
3. Install the two magnets on the back of the back panel where you would like them positioned.
4. Insert the concealment mirror into hole you have cut.
5. Open mirror door and insert screws through the pre-drilled holes.

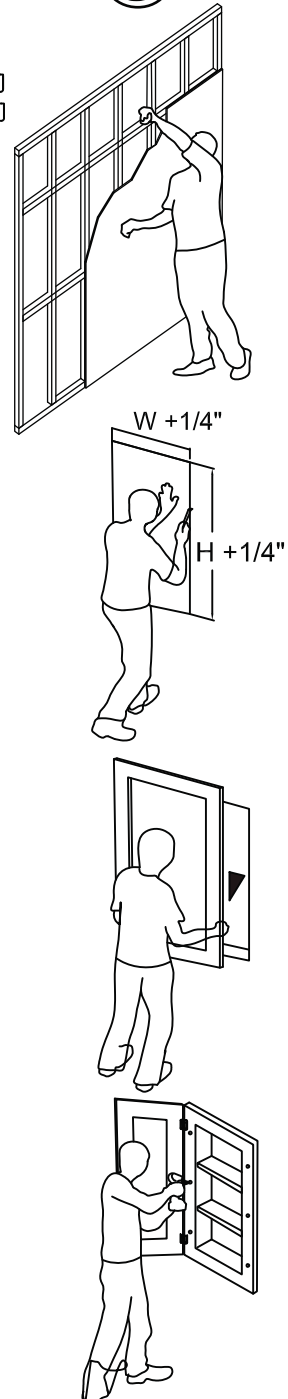


# TIMBER VAULTS


—◊ Concealment Furniture ◊—

## Lock Pin Installations:


1. Place lock pin on the lock pins wooden pedestal inside the cabinet.

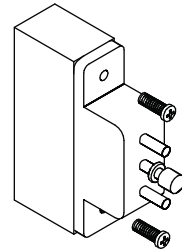

2. Insert both Philips head bolts and tighten.  
Note: You may need to fine tune the lock pin by loosening the the screws and slightly shifting the pin to one side until the pin is perfectly in place.

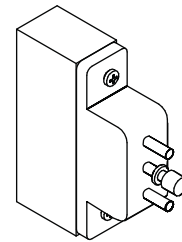

3. Install your batteries into the lock  
(4 x AAA Batteries not included).

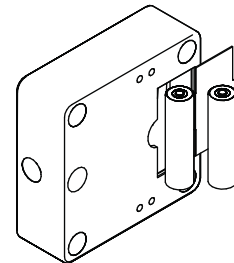

## How To Operate the Lock:

1. Swipe your card over the wooden surface covering the lock. The lock will beep and open. Depending on the weight, you may need to press the bottom of the shelf up to fully unlock.
2. Swipe your card again, the lock will beep and you may close the cabinet. (you must swipe your card to close).

## How Will I know When The Batteries Need Replacing?

The lock is programmed to beep every 10 seconds once the batteries have reached 50% consumption.

## Programming Your Lock:

The lock and keys all come pre-programmed. If you decide to add additional 13.5MHz RFID accessories, you may do so. Simply follow the instructions below:

1. Swipe the programming key over the lock and you will hear the lock beep.
2. Swipe the new item over the lock and you will hear the lock beep.
3. Swipe the programming key over the lock again and you will hear the lock beep.

Your new item should now be programmed.