


TIMBER VAULTS

Concealment Furniture

CAUTION: You must swipe an RFID device to open and close the shelf.



Included Parts:

1. Wood screws
(Qty. varies by mirror size).
2. Mirror
3. One RFID card
4. Battery back-up
5. One RFID Coin
6. One RFID Key Fob
7. Lock pin and bolts

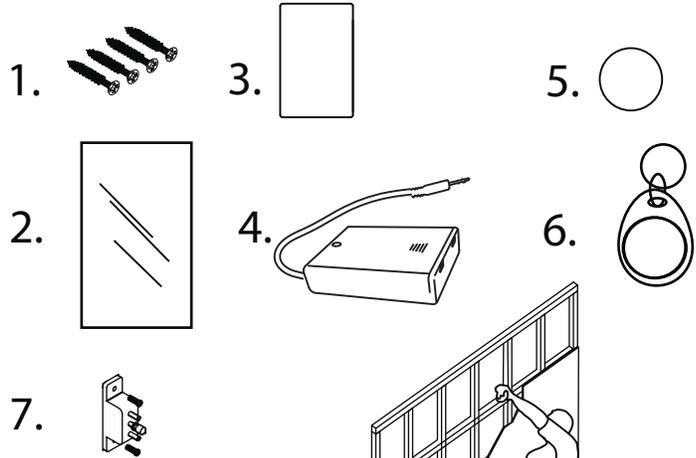

Installation Instructions:

1. Locate wall studs.
2. Cut the drywall between studs to the dimension of the cabinet (back section) that will be inserted into your wall (Add 1/4" to that dimension).
⚠ Caution: Make sure you have checked the area for utilities, etc.
3. Insert the concealment mirror into hole you have cut.
4. Open mirror door and insert screws through the pre-drilled holes.

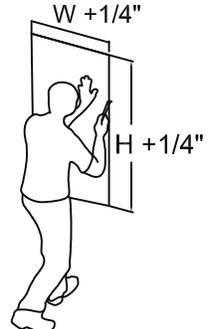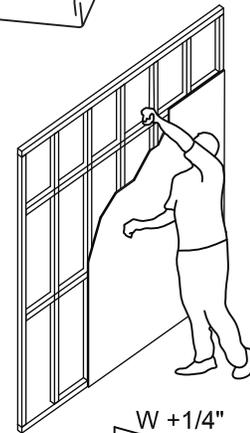


TIMBER VAULTS


—◊ Concealment Furniture ◊—

Lock Pin Installations:


1. Place lock pin on the lock pins wooden pedestal inside the cabinet.

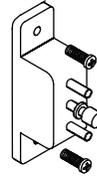

2. Insert both Philips head bolts and tighten.
Note: You may need to fine tune the lock pin by loosening the the screws and slightly shifting the pin to one side until the pin is perfectly aligned with the lock base.

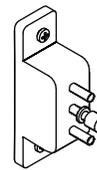

3. Install your batteries into the lock and install the battery cover.
(4 x AAA Batteries not included).

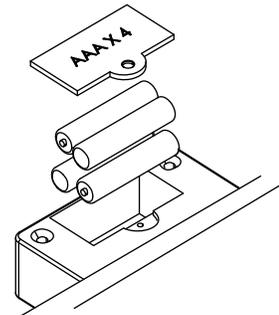

How To Operate the Lock:

1. Swipe your RFID device over the wooden surface covering the lock. The lock will beep and open.
2. Swipe your RFID device again, the lock will beep once and you may close the cabinet. **(you must swipe your card to close).**